

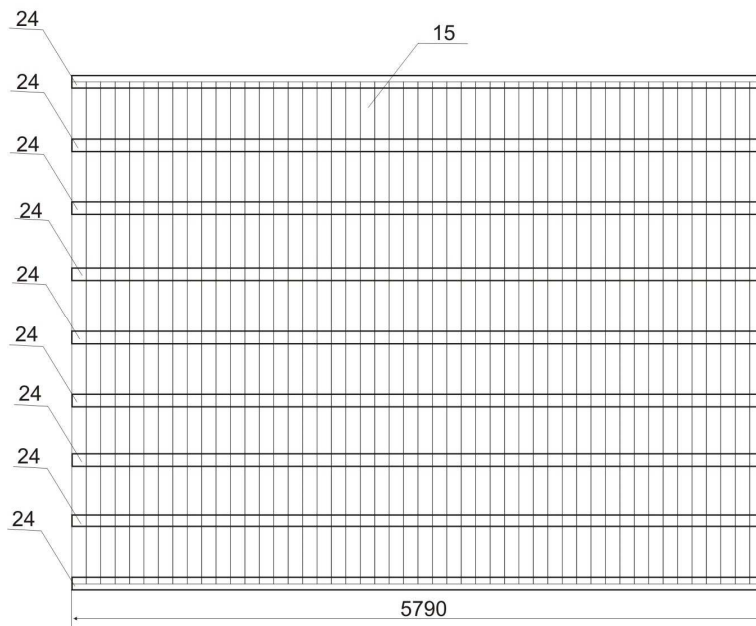



DEVON CABIN 6m x 4m (20X13)
INSTALLATION PLANS

<i>Devon 6 x 4 (44)</i>						
	Size, mm			Detail stock	Details	Annotation
	Length	Width	Table			
1	4000	130	44	8		Wall C D
2	4000	65	44	2		Wall C D
3	394	130	44	44		Wall A C D
4	273	130	44	66		Wall A C D
5	2160	130	44	8		Wall A
6	2113	130	44	22		Wall C D
7	5950	130	44	15		Wall B
8	4146	130	44	2		Wall A B
9	2243	130	44	2		Wall A B
10	4146	130	60	1		Rafters
11	2243	130	60	1		Rafters
12	4468	130	60	2		Rafters
13	2565	130	60	2		Rafters
14	2200	115	20	114		Roof boards
15	3745	115	20	51		Floor boards
16	2300	105	22	4		Wind boards
17	2325	105	22	4		Wind boards
18	2325	60	16	4		Wind boards borders
19	3195	105	22	4		Roof plank
20	3195	35	25	4		Roof plank borders
21	5704	35	25	2		Floor boarders
22	3754	35	25	2		Floor boarders
23	300	140	20	2		Decoration
24	5790	70	50	9		Foundation
25	4000	390	44	3		Vaults
26	1920	1615	44	1		Doors
27	1410	600	44	8		Windows

1. FLOOR BEARERS:

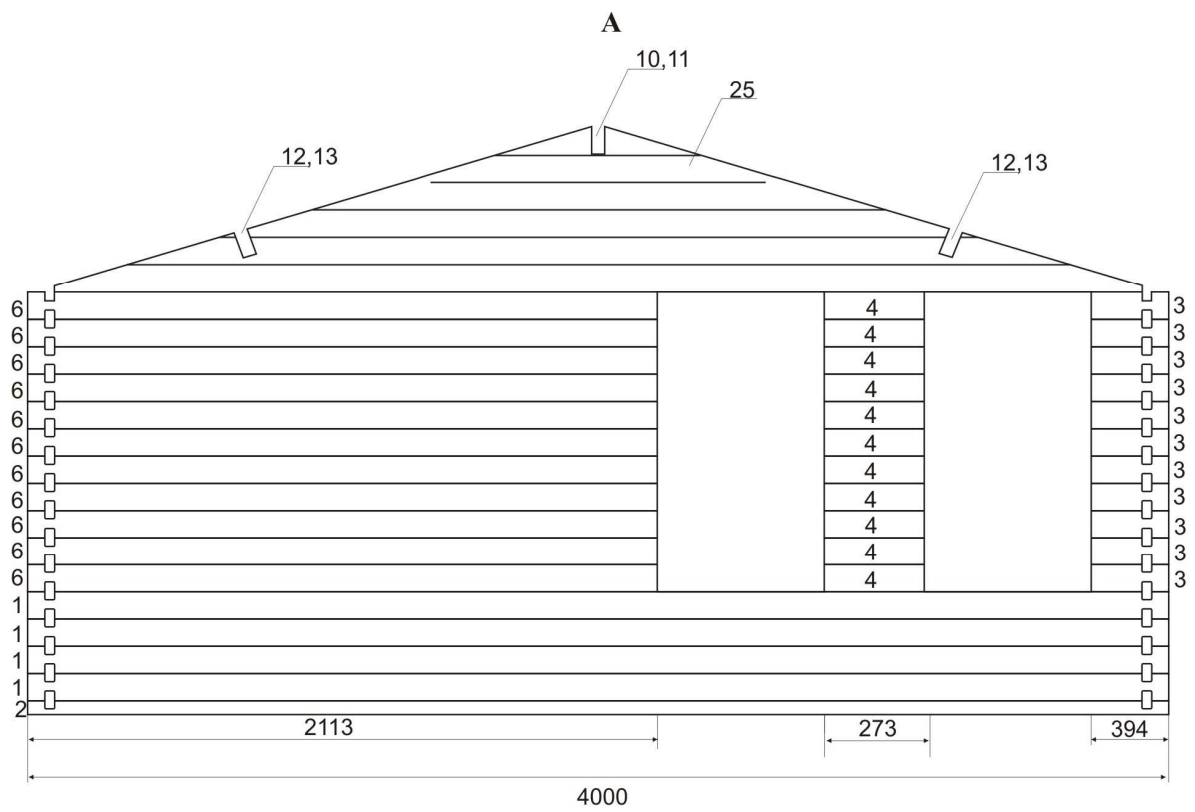



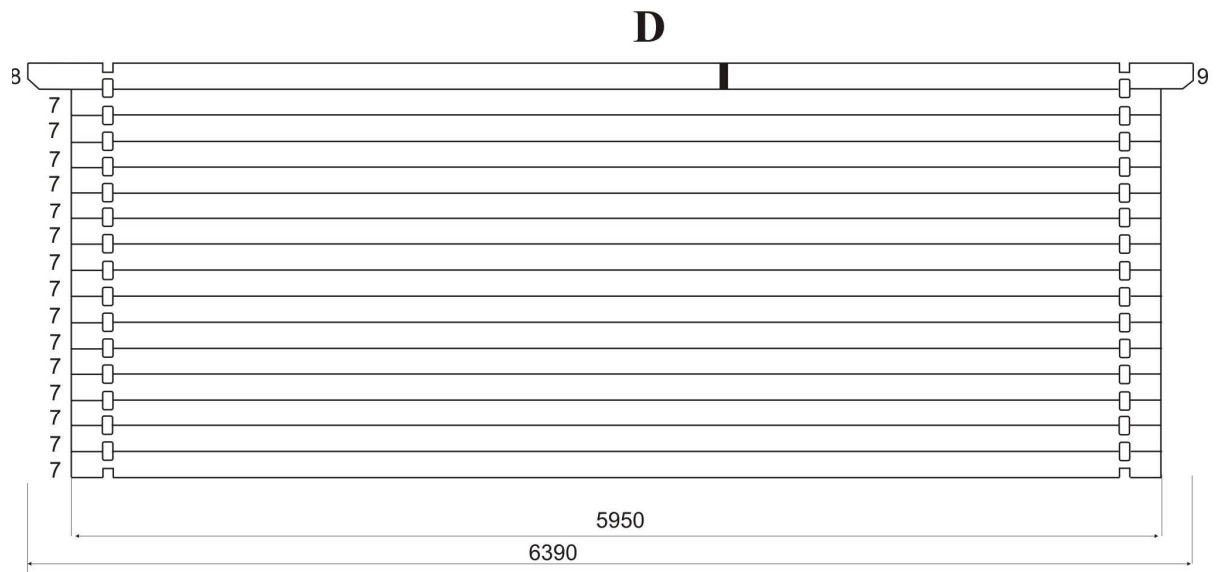


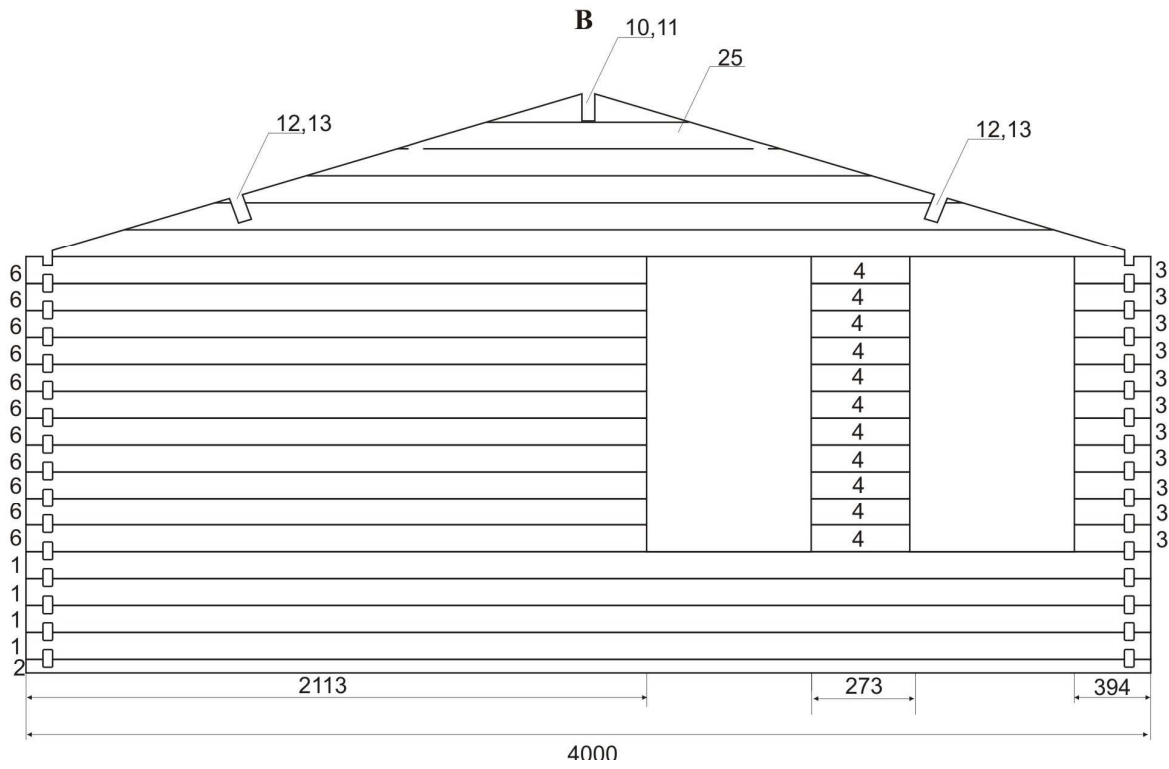







3. THE ROOF:

Rafters

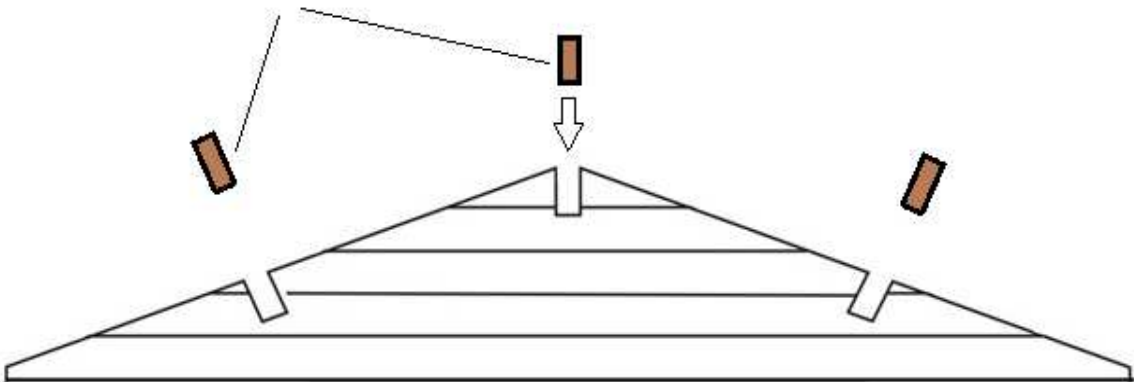


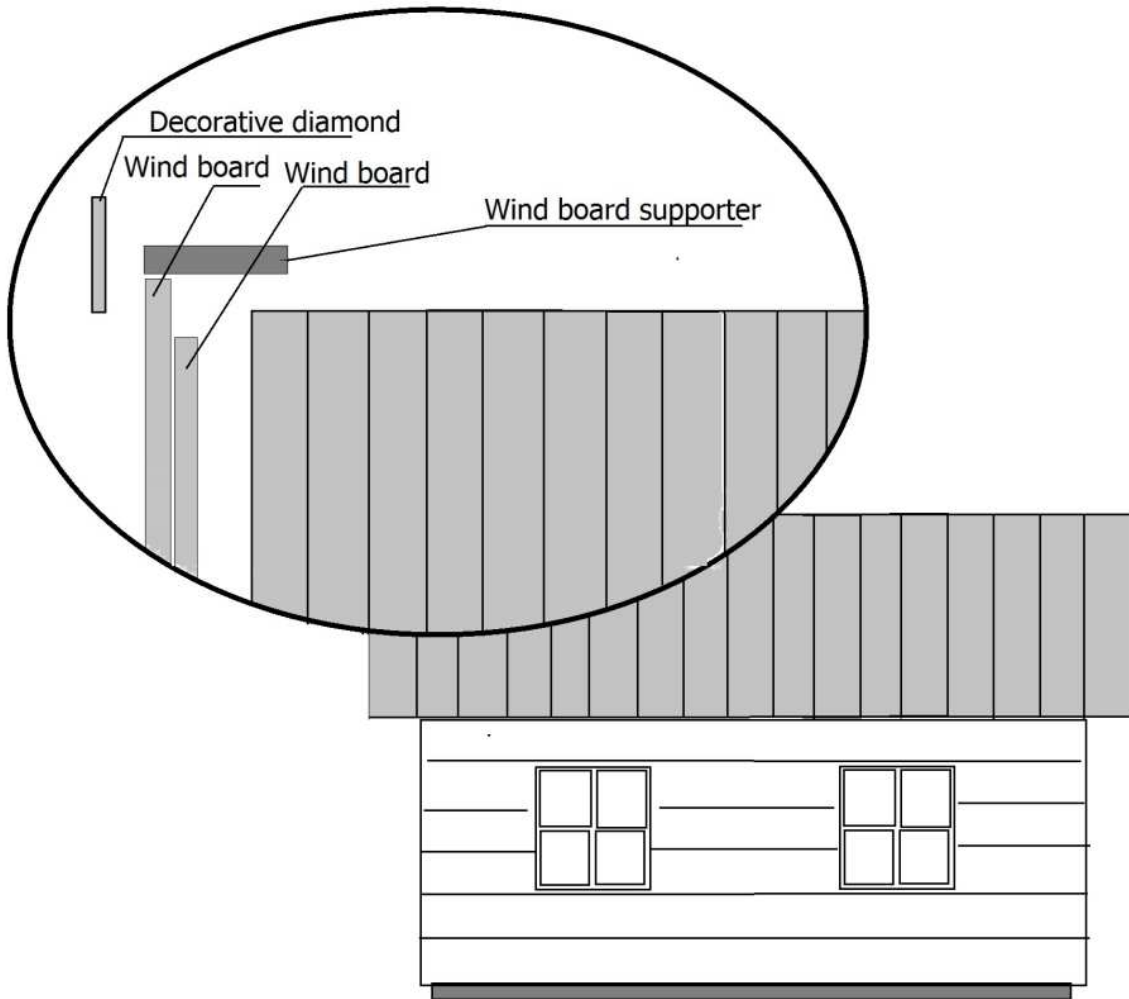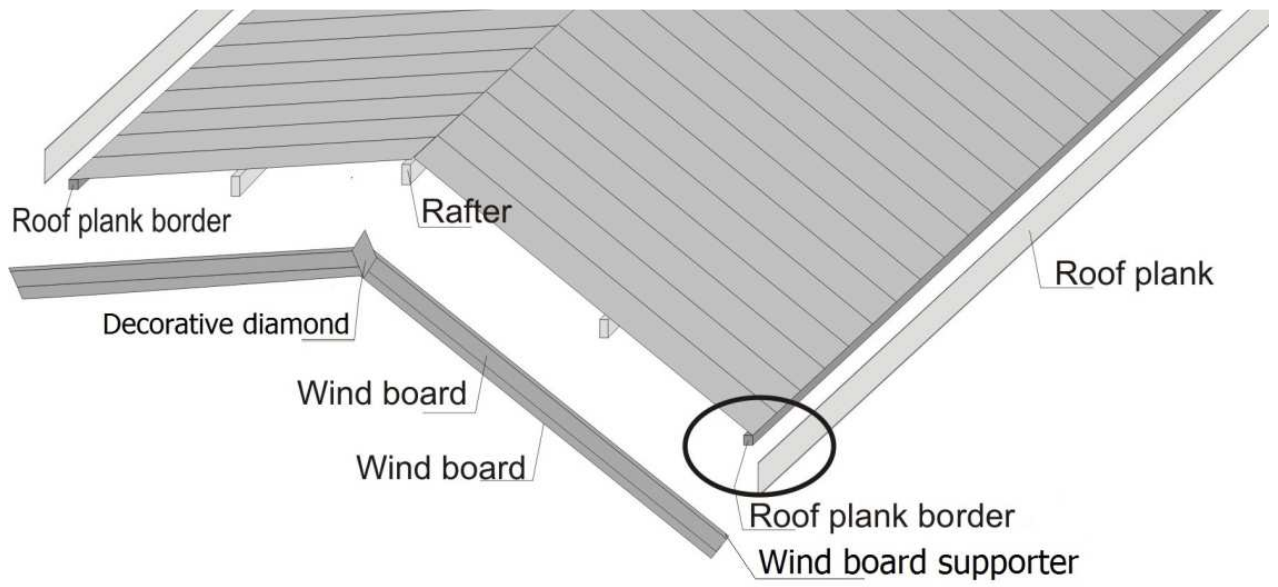

4. DOORS:

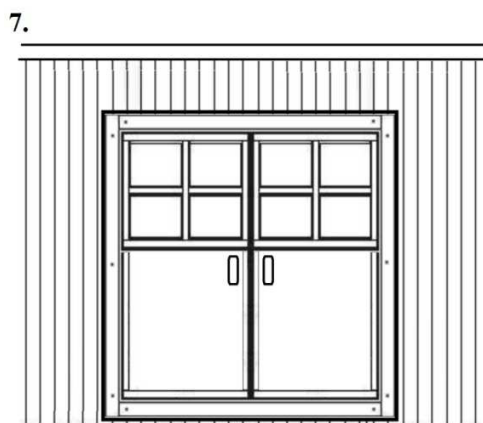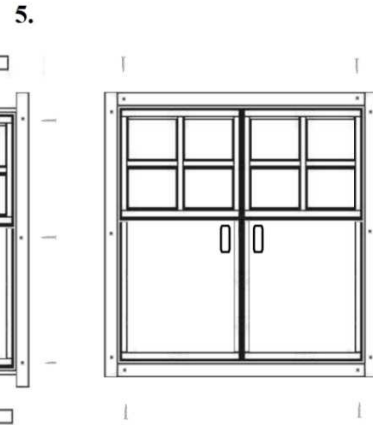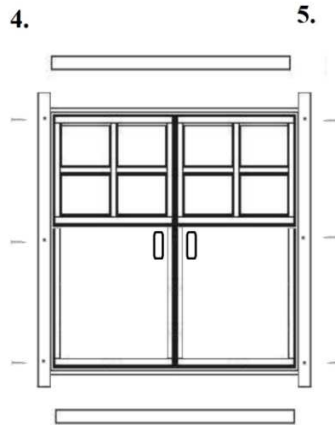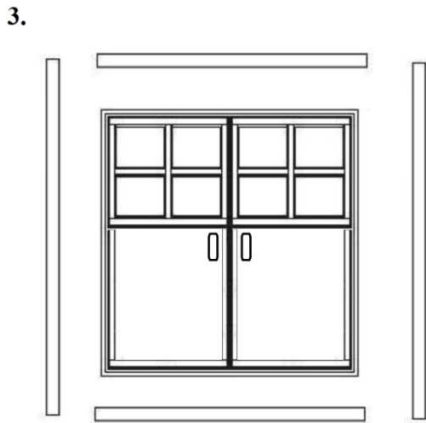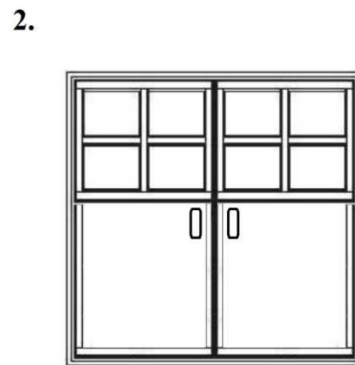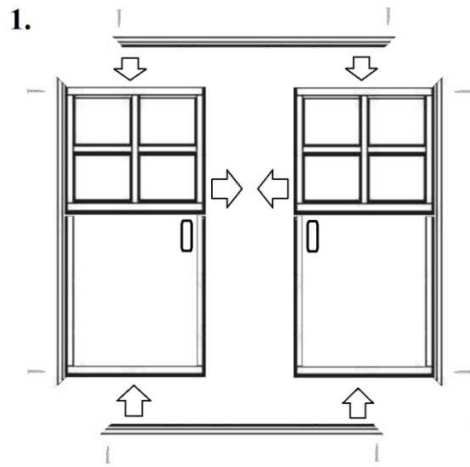


INSIDE

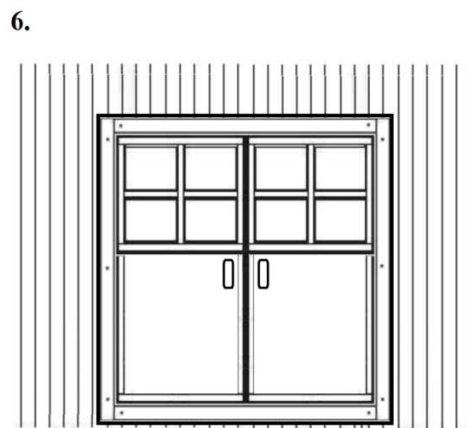


OUTSIDE


5. WINDOWS :

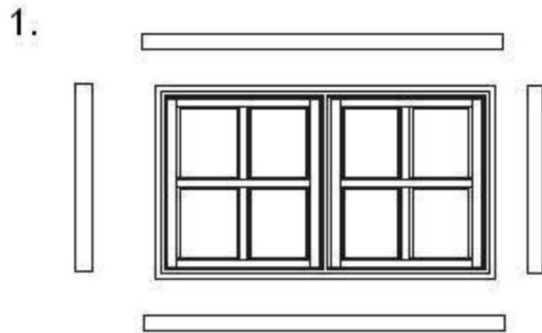


Place the window frame and four support trims on the stable surface.

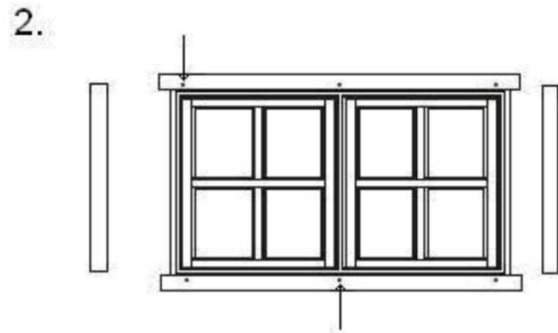


Drill the holes in the support trims and screw them in to the window frame.

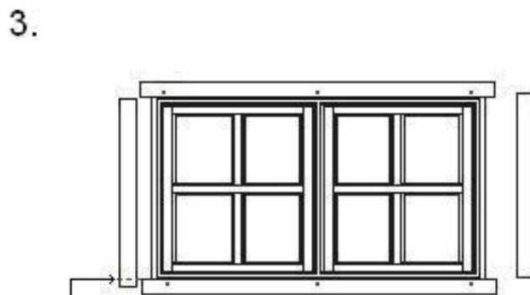


Cut the support trims if necessary

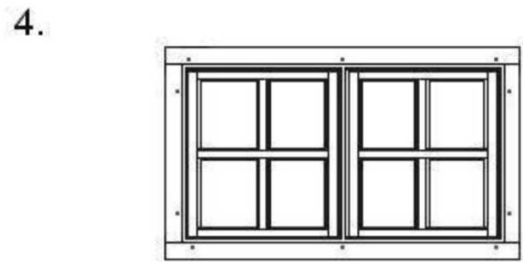

All four support trims are fixed


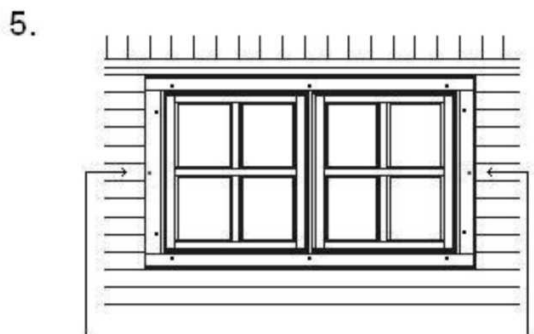


Just insert the window frame in to the space (no screwing)

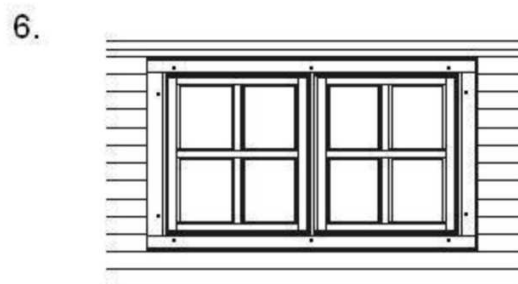

Now screw the rest four support trims in to the window frame from the other side.

6. FLOORBOARDS:

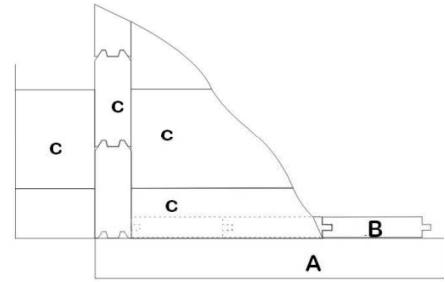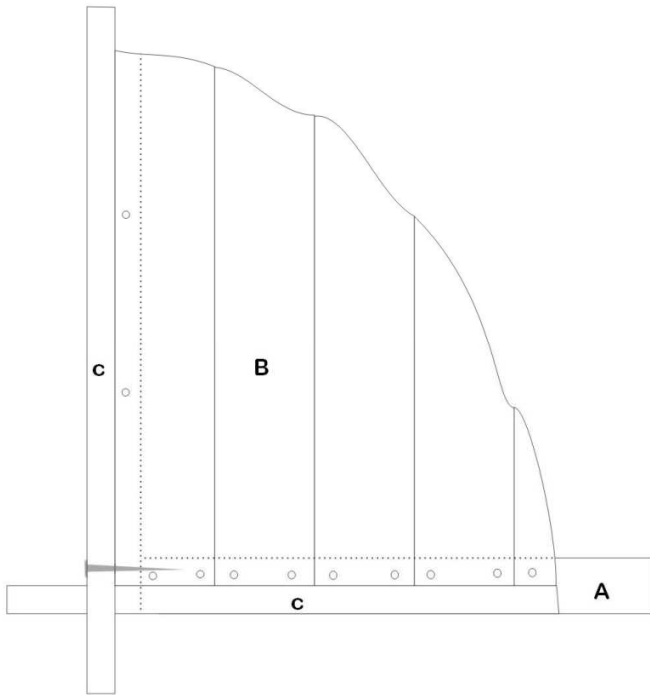

- A, - Bearers
- B, - Floor-boards
- C, - Wall-boards